

## EMS Xtreme4mx

Quick set-up for the Xtreme4mx, default screen configuration: 2x2  
Input resolution: 1920x1080  
Output resolution: 1920x1080

Please follow the steps below for a quick setup of the Xtreme4mx by using the remote control.

Further configurations can be adopted by linking via RS232 and using the Xtreme4mx application.

### Step 1: Choose all outputs to one input (F1+ INPUT 1~4+TAKE)

Please select press F1-> select input 1-4 (as indicated in picture) -> press take

### Step 2: press F2 to switch between matrix mode and videowall mode

