

Xtreme-HD4

User Guide Version 1.0.2



Contents

Introduction	1
Triple Channel VIDEO.	2
Flexible Audio CAPTURE.	2
EMS Unified Xtreme Driver	2
MODELS.	2
Optional ACCESSORIES.	2
Specification.....	3
Unpacking.	4
Installing the Capture Card.....	5
Using the Optional Audio Module (AM2).	7
DirectShow.....	9
Software Installation.....	9
Application Overview	10
Using the card with other EMS PRODUCTS.	10
Technical Support.	10
INDEX.	12

Introduction

The Xtreme-HD4 is a high end, four channel, high definition video capture card delivering performance and flexibility in demanding environments.

The Xtreme-HD4 has four independent video capture channels, supporting high definition capture and analogue video. The signals are input on four DVI-I connectors provided by a pair of EMS DVI splitter cables. Each input can support HDMI, DVI, VGA and analogue Component (YPbPr) at all resolutions up to 4096 x 2048, at 165 MHz Pixel Clock (digital modes) or 170 Msps in analogue modes.

The Xtreme-HD4 captures all four video channels simultaneously and triple buffers them into onboard storage for tear free video, alongside up to four audio streams that can be selected from the HDMI audio ports. This data can then be processed and copied using DMA transfers to the host system for display, storage or streaming.

- A single card solution for distance learning, lecture capture and web casting
- Viewing analogue or DVI sources from a wide range of PCs, MACs, Industrial/Medical equipment, cameras and other video equipment
- Videoconferencing

DirectShow drivers for WDM Streaming driver supports the following applications to encode, record and stream video over networks or the Internet:

- Windows Media Encoder®
- VLC
- StreamPix
- VirtualDub
- Adobe Flash Encoder
- AMCap
- Any other DirectShow encoding software

Hardware Overview

Quad Channel Video

HDMI / DVI / RGB / YPbPr Video Capture

- Maximum resolution up to 4096 x 2048, at 165 MHz Pixel Clock (Digital modes) or 170 Msps in analogue modes.
- HDMI audio capture with streaming from each DVI Channel
- ~800 MB/s bandwidth per capture processor, 3.2GB/s for the card

Audio Features

HDMI Audio capture and streaming from each DVI Channel supports audio capture to the PCI Express bus at popular sample rates from 44.1 to 96 ksamples/s at 16 bits/sample. The card supports playback and mixing of HDMI embedded audio.

EMS Unified Xtreme Driver

Multiple cards per system, 16 streams per channel

Frame sync and time stamping

Direct Show interface EMS

RGBEasy API Models:

Xtreme-HD4 - Quad Channel HDMI / DVI / RGB / YPbPr Capture Card.

Specification

Board Format	Full size, 8 Lane PCIe 3.0 interface
Connectors	Two DMS59 high density video connectors
Maximum Sample Rate	170Mpixels per second analogue RGB or 165 MHz DVI.
Maximum Data Rate	800 MB/s bandwidth per capture processor
Video Sampling	24 bits per pixel / 8-8-8 format.
Video Capture Memory	256MB per capture channel, triple buffered
Analogue RGB Mode Support	640 x 480, 800 x 600, 1024 x 768, 1280 x 1024, 1600 x 1200, 1920 x 1080, 1920 x 1200, custom modes.
DVI Single Link Mode Support	640 x 480, 800 x 600, 1024 x 768, 1280 x 1024, 1600 x 1200, 1920x1080, 1920 x 1200, and custom modes.
HD Modes	1080p, 1080i, 720p, 576p, 576i, 480p and 480i using a Component-DVI connector For HDCP support, contact the Sales department for more information
Input Mode Detection	Automatic detection of input modes in hardware, enabling the tracking of mode changes in the source signal. DirectShow streams are maintained at a fixed resolution across mode changes.
Pixel Transfer Formats	RGB: 5-5-5, 5-6-5 or 8-8-8 (24BIT/32BIT) pixels. YUV: 4:2:2. MONO: 8bit.
Update Rate	User defined, captured frame rate will match the source providing max data rate (800MB/s) is not exceeded. Multi-buffered to eliminate tearing artifacts.
Video Format Options	Analogue RGB plus HSync and VSync (5 wire). Analogue RGB with Composite Sync (4 wire). Analogue RGB with Sync on Green/YPbPr (3 wire). DVI Single Link, HDMI 1.3
Operating System Support	Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows Server 2012, Windows 7, Windows 8 and Linux support See www.EMS.co.uk for updates.
Power Requirements	Max current at 1.9A @ 12V Max current at 2.5A @ 3.3V Max power 31 Watts
Operating Temperature	0 to 35 deg C / 32 to 96 deg F
Storage Temperature	-20 to 70 deg C / -4 to 158 deg F
Relative Humidity	5% to 90% non-condensing.
Warranty	3 years.

We are continuously developing the technology used within our product ranges delivering outstanding innovative solutions, therefore the specification may change from time to time.

Unpacking

Your packing box should contain the following items:

- The Xtreme-HD4 capture card
- 2 x DVI Splitter cables
- Installation CD-ROM (for latest drivers go to www.EMS.co.uk)

Note:

All plug-in cards are static sensitive and are packed in anti-static material. Please keep the card in its packaging until you are ready to install.

It is recommended that you do not discard the packing box until you are completely satisfied with the Xtreme-HD4 capture card and it is fully installed and working correctly. We also recommend that you make a note of the serial number of the card in a prominent place before the card is plugged into the computer. This should hasten any query should you need to contact our Technical Support Department. The serial number is displayed on the card itself and the box label.



Installing the Capture Card

You are likely to need a flat blade and /or a cross head screwdriver for the installation of the Xtreme-HD₄ card; it would be useful to have these to hand before you begin.

- Power down the PC (including peripherals), switch off at the mains and disconnect all the cables connected to the computer, noting the positions for accurate reconnection.
- Remove the PC cover.
- For the Xtreme-HD₄ capture cards, locate a vacant PCI Express slot (mechanically x8 or higher) on the motherboard and remove the blanking plate (retain all screws). If the card is to be used in a x8 slot, it should be noted that the edge connector will overhang the slot. Ensure there is sufficient space behind the slot on the motherboard for the XtremeDH₄ card to fit.


If you are in doubt consult your motherboard documentation to correctly identify a PCI Express slot. If the card is forced into a 32 or 64 bit PCI or PCI-X slot it will be irreparably damaged when the system is powered up and the warranty will be void.

- Reconnect all cables to the PC then connect DVI cables (not supplied) distributing the DVI source signal to the connectors on the Splitter Cables connected to the Xtreme-HD₄ capture card
- Power up the PC and commence the software installation


How to Connect Input Sources

The Xtreme-HD₄ card has two DMS 59 connectors, attach the two splitter cables (provided) to the connectors on the Xtreme-HD₄ card. The DVI-I connector on the splitter cable supports DVI, HDMI, Component and RGB (VGA) inputs using adapters (available accessories) where required.


A DVI input is connected directly into the DVI-I splitter cables.

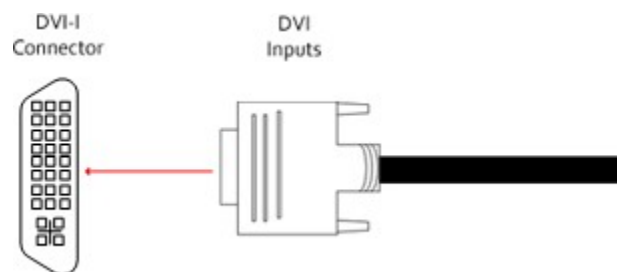


An HDMI input is connected to the DVI-I connector on the splitter cable using a DVI-HDMI Adapter:

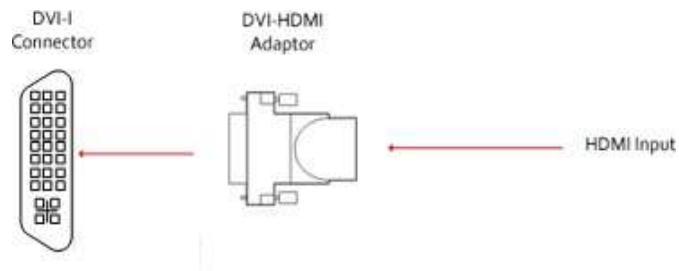

A Component input is connected to the DVI-I connector on the splitter cable using a DVI-Component Adapter:

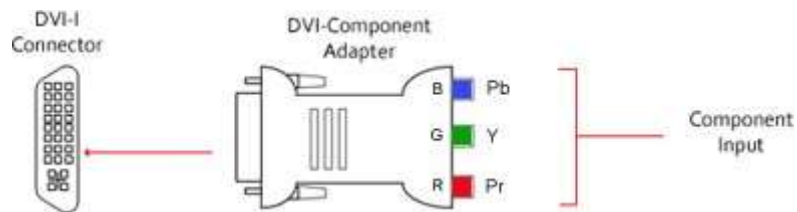

An RGB (VGA) input is connected to the DVI-I connector on the splitter cable using a DVI-VGA Adapter:

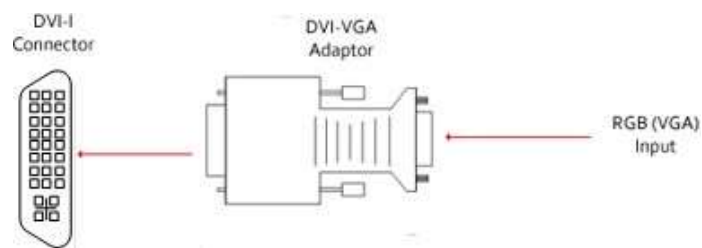


Accessories Available - (Contact EMS sales for details)

Product Name	Description
DVI/ VGA	DVI-A to VGA adapter
DVI/ HDMI	DVI to HDMI adapter
DVI/ COMPONENT	DVI to YPbPr adapter

Installing Multiple Cards

Multiple cards can be installed in a system providing a large number capture channels. Combinations of Xtreme capture cards in the same machine are supported by the driver.

In order to control the order in which the driver uses the cards, it is recommended when installing multiple cards that the J₄ links on the Xtreme-HD₄ are configured. The example below shows the jumper link settings for up to 32 cards in a single system. When two cards share the same link settings, their order is determined by the PCI Express bus.

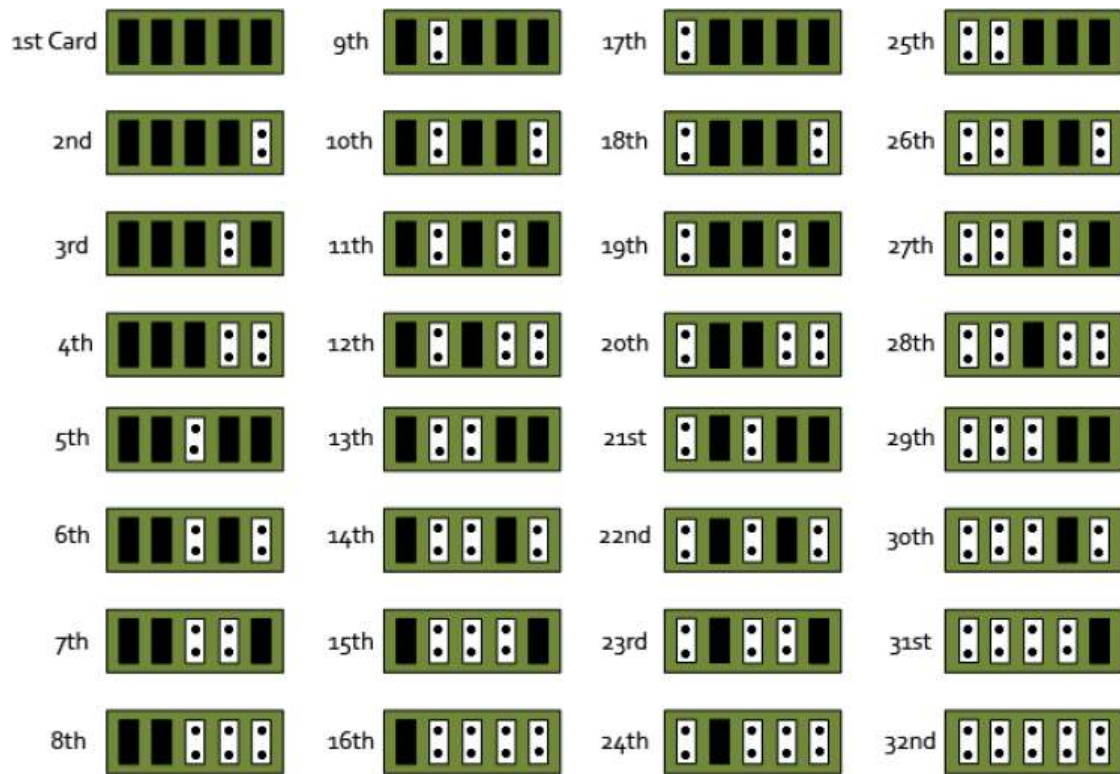

DirectShow

If you change the link ordering after installation you must run dplinks.exe. This program will update the existing input names used by the Windows® DirectShow interface.

To run the dplinks program open the **Run** by clicking on **Start/Run** and type dplinks and then press Enter.

The program will run, however no notifications are displayed.

Firmware Upgrades

The Xtreme-HD4 cards allow firmware upgrade to be completed on site rather than returning the card to EMS. Whenever a firmware upgrade is performed, the J1 Link **MUST BE FITTED on the** Xtreme-HD4. To perform the upgrade, follow the step-by-step instructions provided by the upgrade application.

In the unlikely event that something goes wrong during the upgrade process (e.g. System power outage) it is possible to revert to the factory settings by powering down the system, temporarily removing the J1 link then powering up the system with the link removed. Once the system has rebooted, replace the J1 link link (whilst the system is powered up) and restart the firmware upgrade process.

It should be noted that the latest driver installation program includes an automatic firmware update, if required. Therefore, prior to installing the application and driver, ensure that J1 link is fitted.

Software Installation

Software Installation

The Xtreme software (driver and application) is installed from www.ems-imaging.com/downloads

The installation process should start automatically.

Follow the installation wizard instructions as prompted.

Regular software updates are available from our website:

www.ems-imaging.com/downloads

Application Overview

The application displays the connected source in a window; it has the following features:

- Scales the data to fit in the window
- Ability to set up sources accurately (settings automatically saved)
- Save a single frame to a file in one of the following formats:
BMP, JPEG, GIF, TIFF, PNG
- Print a single frame
- Maintain the aspect ratio of the displayed captured data
- Cropping
- Display text over the data (on-screen display)
- Command line interface
- Help file documenting all features

Note:

The supplied drivers and software require that you are using:

- **Windows® XP, Windows® Vista, Windows® Server 2003, Windows® Server 2008 or Windows® 7 (x86 and x64 Operating Systems)**
- **CD / DVD ROM Drive**

Using the card with other EMS products

The Xtreme-HD4 captures data and stores it in an on-board video buffer. This data is then copied using DMA to the host system for display, storage or streaming.

When a EMS graphics card is used, Xtreme-HD4 transfers the data directly to the graphics card thereby increasing performance. The Xtreme-HD4 sends the relevant portions of each captured image to each display channel and instructs each channel to use its graphics engine to render the data. This fully utilises the hardware and dramatically increases performance.

When a Direct3D compatible graphics card is used the data can be transferred direct to the graphics card in a similar manner to the EMS graphics card with the same benefit of non-tearing captures.

When the data is displayed on a non EMS graphics card, the Xtreme-HD4 sends the data to system memory or direct to the graphics card, dependant on the software used for display.

Technical Support

Registered Users can access our technical support line using, email, and the Support page on the EMS Web Site, usually with a response within 24 hours (excluding weekends).

Via Email

Send an email to support@ems-imaging.com with as much information about your system as possible. To enable a swift response we need to know the following details:

- Specification of the PC - including processor speed
- Operating System
- Application Software
- EMS Hardware / Software
- The exact nature of the problem - and please be as specific as possible.

Please quote version and re Xtreme numbers of hardware and software in use wherever possible.

Index

A

application 9

C

Component input 6

D

EMS 10

EMS CD 8

EMS Limited 10

Direct3D 9

DirectShow 8

DirectShow interface 8

dplinks program 8

DVI input 5

F

firmware upgrade 8

Firmware Upgrades - Xtreme-HD4
8

H

HDMI 5

HDMI input 6

Help File 8

I

Input Sources 5

Installing the Capture Card 5

Installing the Xtreme-HD4 5

J

J11 link 8

M

Multiple cards 7

Multiple Cards 7

P

packing box 4

R

RGBEasy API 2

RGB (VGA) input 6

S

software 8

T

Technical Support 10

U

Unpacking - Xtreme-HD4 5

V

video buffer 9