


XtremeAV-HD1+

User Guide

Version 2.0.2

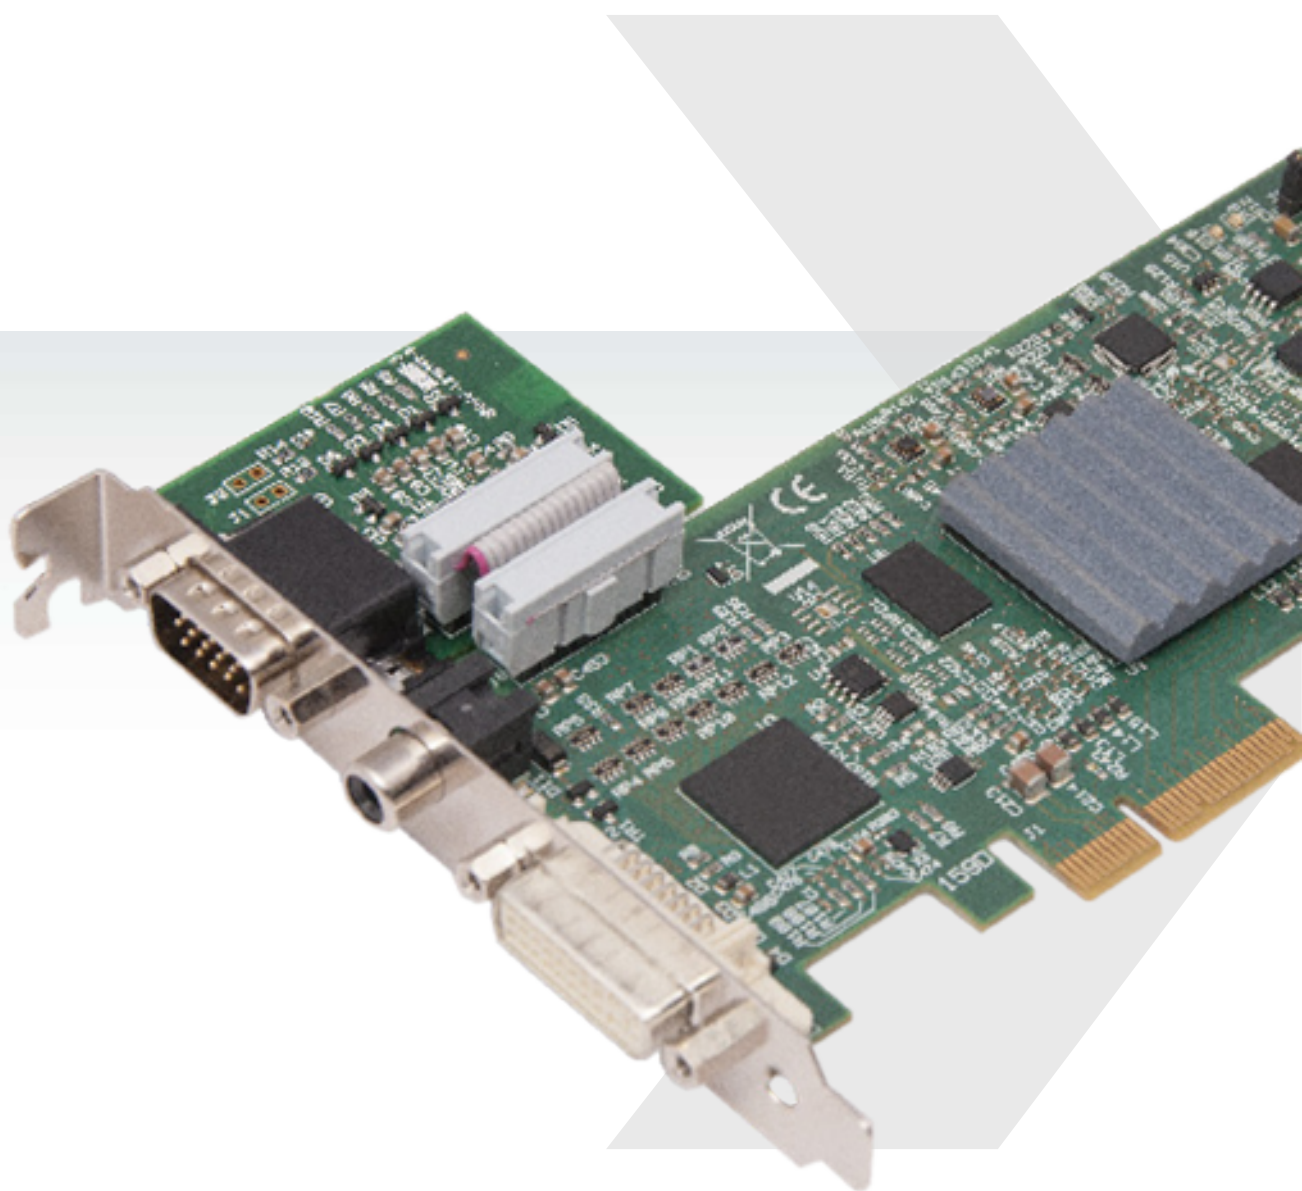

Contents

Introduction	1
Hardware Overview	2
Flexible Audio Capture.	2
EMS Unified Xtreme Driver	2
MODELS.	2
Specification.....	3
Unpacking	4
Installing the Capture Card.....	5
Installing Multiple Cards.....	8
Software Installation.....	9
Software Overview	10
Video Streaming.	10
Xtreme Software CAPABILITIES.	10
Multistream	11
Xtreme Application Overview	11
Using the card with other EMS PRODUCTS.	12
EMS LIMITED.	13
INDEX.	14

Introduction

The XtremeAV-HD1+ has two independent video capture channels – one supporting HD capture and a second simultaneously decoding Standard Definition composite video. The XtremeAV-HD1+ also adds analog and HDMI audio capture, which can be perfectly synchronised with either video capture channel.

- A single card solution for distance learning, lecture capture and web casting
- Viewing analog or DVI sources from a wide range of PCs, MACs, Industrial/Medical equipment, cameras and other video equipment.
- Videoconferencing

DirectShow drivers for WDM Streaming driver supports the following applications to encode, record and stream video over networks or the Internet:

- Windows Media Encoder®
- VLC
- StreamPix
- VirtualDub
- Adobe Flash Encoder
- AMCap
- Any other DirectShow encoding software

Hardware Overview

Dual Channel Video

- Channel 1: Digital or Analog HD Video
- Channel 2: Composite Video

Flexible Audio Capture

- Balanced (XLR) and Unbalanced (RCA) from optional module
- HDMI audio through HD Video Channel

EMS Unified Xtreme Driver

- Multiple cards per system, 16 streams per channel
- Frame sync and time stamping
- Direct Show interface
- EMS RGBEasy API

Models

XtremeAV-

HD1+/F

XtremeAV-

HD1+/H

XtremeAV-

HD1+/B

+ Specification

Board Format	PCI-Express x4 low profile card, 68.9mm x 167.6mm
Connectors (main board)	DVI-I , RCA (female)
Connectors (audio board)	<p>HD15 (male) for connection of supplied Audio Breakout cable:</p> <ul style="list-style-type: none"> • Stereo line in (2 x RCA), stereo balanced in (2 x XLR), stereo line out (2 x RCA) • 16-WAY header for connection to main board
HDMI Capture	<ul style="list-style-type: none"> • Supports HDMI 1.3 to 225MHz (including deep colour modes). For HDCP support, contact the Sales Dept at EMS for more information • HDMI audio can be selected as source for audio streaming. • Incorporates TMDS equalizer to support up to 20m cables.
DVI Capture	<p>Supports DVI 1.0 RGB 24BIT capture to 165MHz.</p> <p>Incorporates TMDS equalizer to support up to 20m cables.</p>
VGA / YPbPr Capture	<p>Triple ADCs sampling up to 170MSPS. Full 4:4:4 sampling, 8 bits per colour.</p> <p>5-wire, 4-wire or sync-on-green signal formats.</p>
Composite Video Capture	CCIR601 SAMPLING. PAL, NTSC, SECAM formats automatically detected
Audio Capture	<p>Stereo Line-In/Stereo balanced inputs with programmable gain (+/-12dB)</p> <p>16/24 bit sampling at 44.1kHz.</p> <p>Analog stereo line-out at up to 64kHz sampling, sourced from Analog input or HDMI stream</p>
Video Capture Memory	<p>256MB high bandwidth frame buffer supports triple buffering of HD and SD video.</p> <p>Local storage of complex scatter-gather tables for DMA engine (eliminates read overhead)</p>
Video Processing	<p>Polyphase FIR scaling engine (7x5) for hardware downscaling and upscaling</p> <p>Colour space conversion allows captured data to be transferred in any format:</p> <ul style="list-style-type: none"> • RGB 16 bit (5-5-5, 5-6-5), 24 bit (8-8-8) or 32 bit (8-8-8-alpha) • YUV 16 bit (4:2:2) • Mono: 8bit
DMA Engine	<p>Direct DMA to physical or virtual memory buffers with full scatter-gather support.</p> <p>DMA bandwidth : up to 800MB/s</p> <p>16 independent DMA streams:</p> <ul style="list-style-type: none"> • Any mix of HD and SD sources, colour space, cropping and scaling parameters
Operating System Support	Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows Server 2012, Windows 7, Windows 8 and Linux support. See www.datapath.co.uk for updates.

Power Requirements	Max current at 12V – 0.5A Max current at 3.3V – 0.2A Thermal dissipation – 6.5W
Operating Temperature	0 to 35 °C (32 to 96°F)
Storage Temperature	-20 to 70 °C (-4 to 158°F)
Relative Humidity	5% to 90% non-condensing
Warranty	3 years

We are continuously developing the technology used within our product ranges delivering outstanding innovative solutions, therefore the specification may change from time to time.

+ Unpacking

Your packing box should contain the following items:

	XtremeAV-HD1+/F	XtremeAV-HD1+/H	XtremeAV-HD1+/B
Base XtremeAV-HD1+ Card	✓	✓	✓
Audio Module Card	✓ Fitted to base card	✓	✗
1 x Full height bracket	✓ Fitted to base card	✗	✓ Fitted to base card
1 x Half height bracket	✗	✓ One fitted to each board	✓
1 x Ribbon Cable Long	✗	✓	✗
1 x Ribbon Cable Short	✓ Fitted to base card	✗	✗
1 x Audio Breakout Cable	✓	✓	✗
1 x DVI/VGA Adapter	✓	✓	✓
1 x DVI/Component Adapter	✓	✓	✓
1 x DVI/HDMI Adapter	✓	✓	✓
Installation CD	✓	✓	✓

Note:

All plug-in cards are static sensitive and are packed in anti-static material. Please keep the card in its packaging until you are ready to install.

It is recommended that you do not discard the packing box until you are completely satisfied with the XtremeAV-HD1+ capture card and it is fully installed and working correctly. We also recommend that you make a note of the serial number of the card in a prominent place before the card is plugged into the computer. This should hasten any query should you need to contact our Technical Support Department. The serial number is displayed on the card itself and the box label.

+ Installing the Capture Card

You are likely to need a flat blade and /or a cross head screwdriver for the installation of the XtremeAV-HD1+ card; it would be useful to have these to hand before you begin.

- Power down the PC (including peripherals), switch off at the mains and disconnect all the cables connected to the computer, noting the positions for accurate reconnection.
- Remove the PC cover.
- For the XtremeAV-HD1+/F capture cards, locate a vacant PCI Express slot (x4 or higher) on the motherboard and remove the blanking plate (retain all screws).
- If the XtremeAV-HD1+/H is to be installed in a short form computer, two locations are required. The XtremeAV-HD1+/H and the Audio Module should be installed adjacent to enable both cards to be connected together using the ribbon cable supplied. The Audio Module does not require a slot on the mother- board.

If you are in doubt consult your motherboard documentation to correctly identify a PCI Express slot. If the card is forced into a 32 or 64 bit PCI or PCI-X slot it will be irreparably damaged when the system is powered up and the warranty will be void.


- Reconnect all cables to the PC then connect a DVI cable (not supplied) distributing the DVI source signal to the connector on the XtremeAV-HD1+ capture card
- A standard definition signal can be connected to the RCA connector on the XtremeAV-HD1+
- An Audio feed can be connected to the Audio Module via the Audio Breakout Cable
- Power up the PC and commence the software installation

How to Connect Input Sources


The XtremeAV-HD1+/F card has one DVI-I and one RCA (female) connector and one RGB (male) connector on the Audio Module:

The DVI-I connector supports DVI, HDMI, Component and RGB (VGA) inputs using the supplied adapters where required.


A DVI input is connected directly into the DVI-I connector which accepts DVI-D (digital) or DVI-A (analog) inputs:

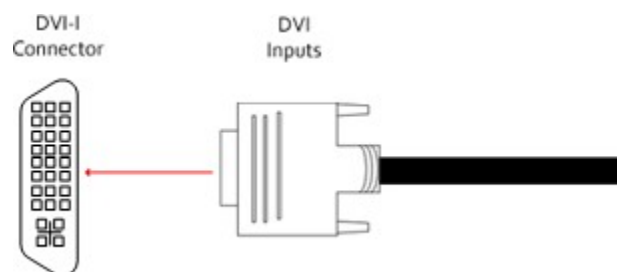


An HDMI input is connected to the DVI-I connector using the supplied DVI-HDMI Adaptor:

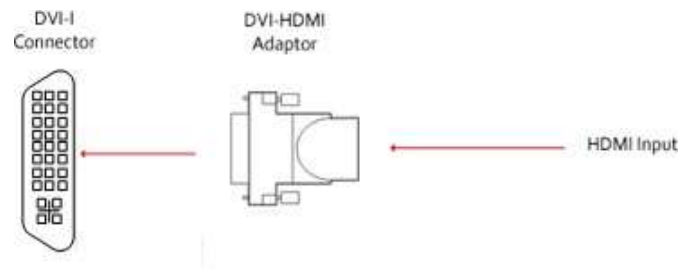


A Component input is connected to the DVI-I connector using the supplied DVI-Component Adapter:

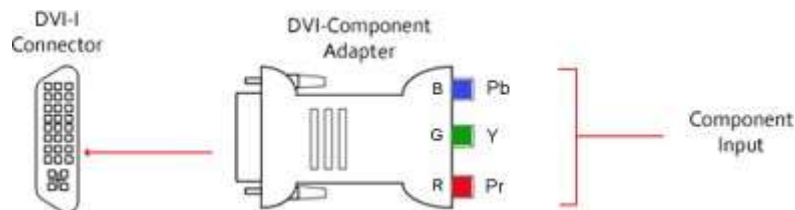


An RGB (VGA) input is connected to the DVI-I connector using the supplied DVI-VGA Adaptor:

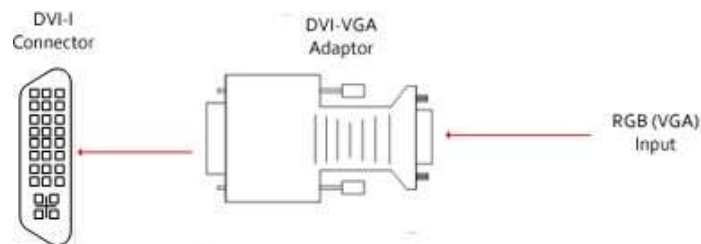

A Standard Definition input is connected directly into the RCA (female) connector on the XtremeAV-HD1+ card:

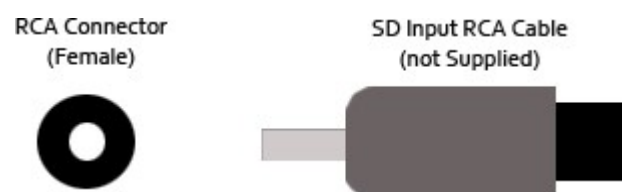

Audio is connected to the Audio Module using the Audio Break Out cable provided:

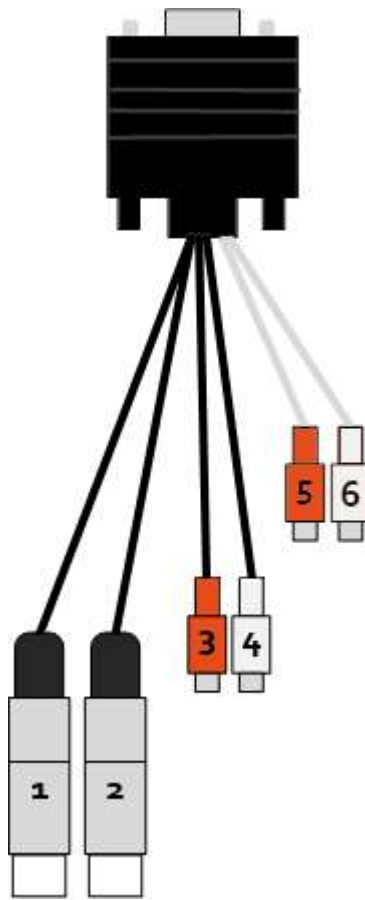


1	Balanced (XLR) Input Left
2	Balanced (XLR) Input Right
3	Unbalanced Input Left
4	Unbalanced Input Right
5	Audio Out Left
6	Audio Out Right

Installing Multiple Cards

Multiple cards can be installed in a system providing a large number of capture channels. Combinations of Xtreme capture cards in the same machine are supported by the driver.

In order to control the order in which the driver uses the cards, it is recommended when installing multiple cards that the J5 links on the XtremeAV-HD1+ are configured. The example below shows the jumper link settings for up to 32 cards in a single system. When two cards share the same link settings, their order is determined by the PCIe bus.

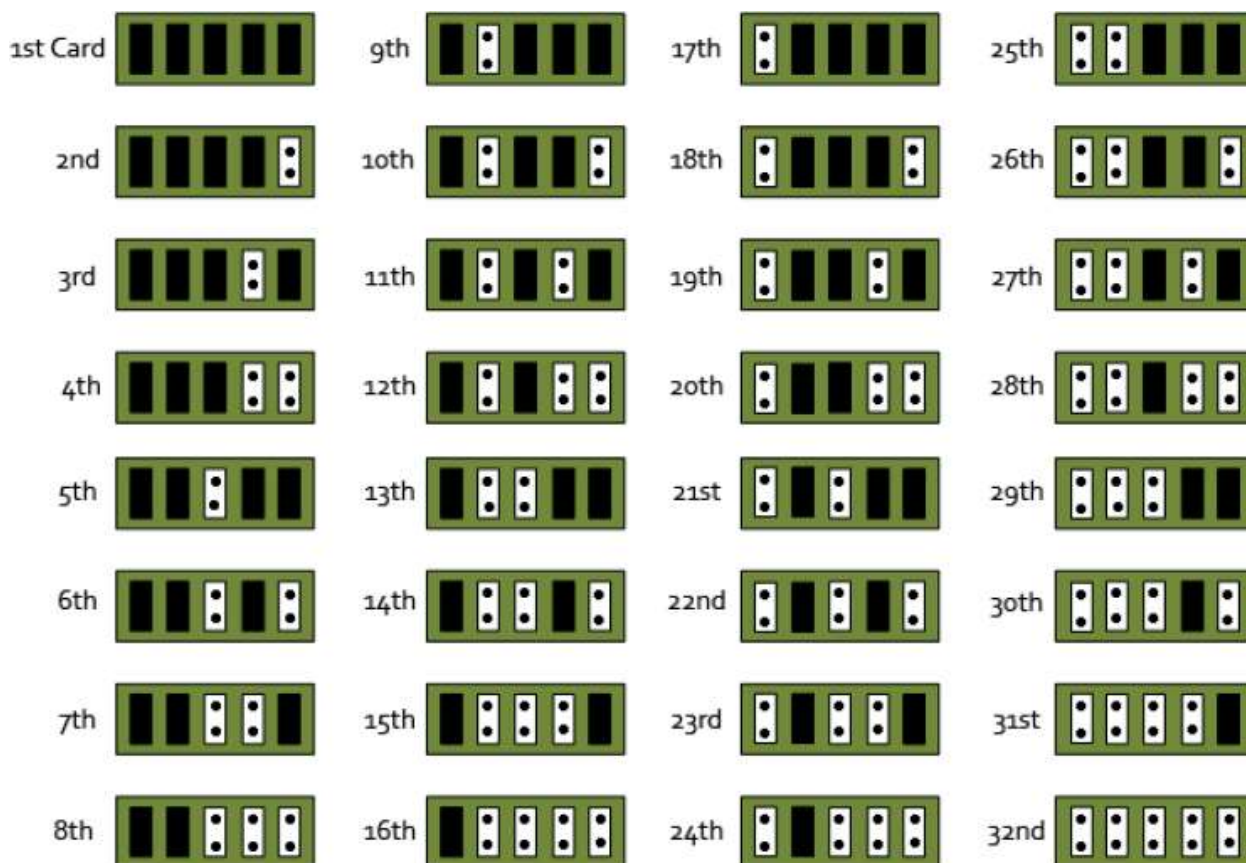

DirectShow

If you change the link ordering after installation you must run dplinks.exe. This program will update the existing input names used by the windows DirectShow interface.

To run the dplinks program open the **Run** by clicking on **Start/Run** and type dplinks and then press Enter.

The program will run, however no notifications are displayed.

Firmware Upgrades

The XtremeAV-HD1+ cards allow firmware upgrade to be completed on site rather than returning the card to Datapath. Whenever a firmware upgrade is performed, the J11 Link **MUST BE FITTED on the** XtremeAV-HD1+. To perform the upgrade, follow the step-by-step instructions provided by the upgrade application.

In the unlikely event that something goes wrong during the upgrade process (e.g. System power outage) it is possible to revert to the factory settings by powering down the system, temporarily removing the J11 link then powering up the system with the link removed. Once the system has rebooted, replace the J11 link (whilst the system is powered up) and restart the firmware upgrade process.

It should be noted that the latest driver installation program includes an automatic firmware update, if required. Therefore, prior to installing the application and driver, ensure that J11 link is fitted.

Software Installation

Software Installation

The Xtreme software (driver and application) is installed from www.ems-imaging.com

The installation process should start automatically.

Follow the installation wizard instructions as prompted.

Regular software updates are available from our website: www.ems-imaging.com

+ Software Overview

All Xtreme capture cards are supplied with a powerful software application for configuring the format of the input sources and displaying the data.

Video Streaming

DirectShow drivers for WDM Streaming driver supports the following applications, to encode, record and stream video over networks or the Internet:

- Microsoft Media Encoder®
- VLC
- VirtualDub
- Any other DirectShow encoding software

For streaming applications, Xtreme cards can be used with Windows Media Encoder to compress and stream captured video. To replay the video, use Windows® Media Player.

Any application compatible with Windows® DirectShow technology can use Xtreme capture cards due to their built-in WDM support.

Xtreme Software Capabilities

Timestamp support for streaming synchronisation:

- Synchronisation of multiple inputs across multiple cards
- Synchronise systems using network clock synchronisation
- For edge blending and other applications

Flexible and configurable EDID Management:

- Allows programming of custom EDID parameters for capture cards

Low Input to Output Capture Latency

DMA to third party graphics vendors back and front buffers via Direct3D

- Compatibility with AMD DirectGMA
- Compatibility with Nvidia GPUDirect

User Mode filter for source selection

- Enables cropping support in DirectShow on all inputs
- Supports Start and Stop trigger interface on all Vision inputs

EMS Unified Xtreme Driver

- Multiple cards per system, 16 streams per input
- Frame sync and time stamping

- DirectShow interface
- The RGBEasy API for advanced audio and video control
- Fully integrated for use with EMS Wall Control software for video wall applications

Multistream

EMS MultiStream feature is available on all EMS capture cards and enables multiple independently formatted video streams to be setup in parallel.

Each stream can be formatted completely independently and individual selection of resolution, colour space, and cropping region can be set for each stream. This maximizes bandwidth utilisation of the capture card PCIe interface, and also simplifies development tasks for application developers who do not need to implement video stream reformatting separately.

Xtreme Application Overview

The application displays the connected source in a window; it has the following features:

- Scales the data to fit in the window
- Ability to set up sources accurately (settings automatically saved)
- Save a single frame to a file in one of the following formats:
BMP, JPEG, GIF, TIFF, PNG
- Print a single frame
- Maintain the aspect ratio of the displayed captured data
- Cropping
- Display text over the data (on-screen display)
- Command line interface
- HDCP supported
- Help file documenting all features

Note:

The supplied drivers and software require that you are using:

- **Windows® XP, Windows® Vista, Windows® Server 2003, Windows® Server 2008, Windows® 7 (x86 and x64 Operating Systems), Windows® 8 or Linux**
- **CD / DVD ROM Drive**

Using the card with other EMS products

The XtremeAV-HD1+ captures data and stores it in an on-board video buffer. This data is then copied using DMA to the host system for display, storage or streaming.

When a EMS graphics card is used, XtremeAV-HD1+ transfers the data directly to the graphics card thereby increasing performance. The XtremeAV-HD1+ sends the relevant portions of each captured image to each display channel and instructs each channel to use its graphics engine to render the data. This fully utilises the hardware and dramatically increases performance.

When a Direct3D compatible graphics card is used the data can be transferred direct to the graphics card in a similar manner to the EMS graphics card with the same benefit of non-tearing captures.

When the data is displayed on a non EMS graphics card, the XtremeAV-HD1+ sends the data to system memory or direct to the graphics card, dependant on the software used for display.

Technical Support

Registered Users can access our technical support line using, email, and the Support page on the EMS Website, usually with a response within 24 hours (excluding weekends).

Via Email

Send an email to support@ems-imaging.com with as much information about your system as possible. To enable a swift response we need to know the following details:

- Specification of the PC - including processor speed
- Operating System
- Application Software
- EMS Hardware / Software
- The exact nature of the problem - and please be as specific as possible.

Please quote version and re Xtreme numbers of hardware and software in use wherever possible.

A

Application 11

Audio 7

Audio Break Out cable 7

Audio feed 5

Audio Out 7

B

Balanced XLR 2

Balanced (XLR) Input 7

C

Component input 6

D

Direct3D 12

DirectShow 9

DirectShow interface 9

dplinks program 9

DVI input 5

E

EMS 13

EMS CD 9

F

Firmware upgrade 9

H

HDMI 5

HDMI input 6

Help File 9

I

Input Sources 5

Installing the Capture Card 5

J

J11 link 9

M

Multiple cards 8

Multiple Cards 8

Multistream 11

P

packing box 4

R

RGBEasy API 2

RGB (VGA) input 6

S

Software 9

Standard Definition 6

Standard Definition input 6

T

Technical Support

U

Unbalanced Input 7

Unbalanced RCA 2

Unpacking 5

V

Video buffer 12

